

QUICK INSTALLATION GUIDE – SNELLE INSTALLATIE HANDLEIDING



support@benext.eu


Thermostat 500



EN

1. PAIR YOUR THERMOSTAT 500


- Set your Z-Wave gateway into inclusion mode. For further information please refer to the manual of your gateway.
- Press the tamper button for 2 seconds. Then release the button to start the pairing routine.
- The gateway will inform you in the App or UI if pairing was successful. For further information please refer to the manual of your gateway.

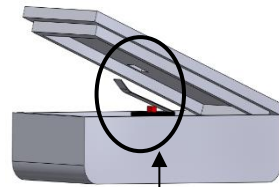

Press for 2 sec.
Druk voor 2 sec.

2. UNPAIR YOUR THERMOSTAT 500


- Set your Z-Wave gateway into exclusion mode. For further information please refer to the manual of your Z-Wave gateway
- Press the tamper button for 2 seconds. Then release the button to start the unpairing routine.
- The gateway will inform you in the App or UI if unpairing was successful. For further information please refer to the manual of your gateway.

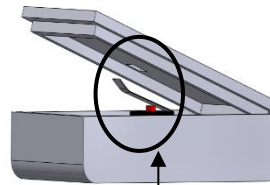

Press for 2 sec.
Druk voor 2 sec.

3. BACK TO FACTORY SETTINGS

- Press the tamper button for 2 seconds. Then release the button to start the unpairing routine. (2b)
- During unpairing routine press tamper 6 times (rapidly) in 1 second.
- De indicatie LED will go on for 1 second to confirm that back to factory was successful.

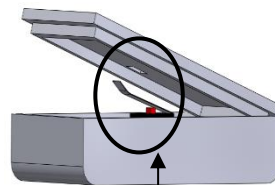

Rapidly press during unpairing
Snel drukken tijdens ont koppelen

Look at www.benext.eu for the complete manual van de BeNext Thermostat 500.

NL

1. KOPPEL UW THERMOSTAT 500

- Start de koppel procedure op uw Z-Wave gateway. Voor meer informatie kijk in de handleiding van uw gateway.
- Druk op de tamper knop voor 2 seconden en laat vervolgens de knop los om het koppelen te starten.
- De Gateway zal u informeren via de App of UI of het gelukt is met koppelen. Voor meer informatie kijk in de handleiding van uw gateway.

2. ONTKOPPEL THERMOSTAT 500

- Start de ont koppel procedure op uw Z-Wave gateway. Voor meer informatie kijk in de handleiding van uw Z-Wave gateway.
- Druk op de tamper knop voor 2 seconden en laat vervolgens de knop los om het ont koppelen te starten.
3. De Gateway zal u informeren via de App of UI of het gelukt is met ont koppelen. Voor meer informatie kijk in de handleiding van uw gateway.

3. TERUG NAAR FABRIEKSINSTELLINGEN

- Druk op de tamper knop voor 2 seconden en laat vervolgens de knop los om het ont koppelen te starten. (2b).
- Tijdens de ont koppel routine druk de knop 6 keer (snel) binnen 1 seconde.
- De indicatie LED gaat 1 seconde aan als het terugzetten naar fabrieksinstellingen gelukt is.

Kijk op www.benext.eu voor de complete handleiding BeNext Thermostaat 500.

